

PURLINE

wineo 1000 Rigid/Multilayer for clicking FoldDown

PURLINE wineo 1000 Rigid/Multilayer for clicking is a high-quality polyurethane floor covering. It is based on ecuran, a high-performance composite material made predominantly from vegetable oils such as rapeseed or castor oil and naturally occurring mineral components such as chalk.

Below we would like to inform you about the special requirements for a successful installation of **PURLINE wineo 1000 Rigid/Multilayer for clicking**. For more information, please refer to the technical specifications in our product collections.

Important general information:

Before processing, make sure that the delivered goods are in perfect condition. Goods that have been cut to size or laid are not subject to complaint. Before installation, the goods must be checked for color and batch uniformity. Only install planks/tiles of the same batch in one room.

The relevant national standards, guidelines and regulations, together with the technical documents and generally acknowledged rules of the trade, apply when installing **PURLINE wineo 1000 Rigid/Multilayer for clicking**.

Substrate condition:

The substrate must be level, load-bearing and permanently dry. The maximum height tolerance must not exceed 3mm per linear meter or 1mm per 10cm for tile edges. Textile floor coverings and needle fleece must be removed.

Substrates:

wineo 1000 Rigid/Multilayer for clicking can be installed floating on all types of screeds, on existing vibration-free wood, plank and chipboard floors, on PVC, plastic coverings and linoleum, on stone, ceramic and marble floors. Textile floor coverings and needlefelt must be removed. Generally, the removal of old floor coverings is recommended to counteract interactions and irritations.

Substrates not listed require the approval of Windmüller GmbH.

Notice:

The flooring installer must check the subfloor's readiness for installation before installing the flooring and raise any concerns. Especially in case of:

- larger unevenness
- insufficiently dry subfloor.
- insufficiently firm, too porous and too rough surface of the subfloor,
- contaminated surface of the substrate, e.g. by oil, wax, varnish, paint residues,
- incorrect height of the surface of the substrate in relation to the height of adjacent components,
- unsuitable temperature of the substrate,
- unsuitable room climate,

PURLINE

wineo 1000 Rigid/Multilayer for clicking FoldDown

- missing heating protocol in case of heated floor constructions,
- missing protrusion of the edge insulation strip,
- missing marking of measuring points in case of heated floor constructions,
- missing joint plan.

When installing **wineo 1000 Rigid/Multilayer for clicking** on underfloor heating systems, EN 1264-2 (underfloor heating systems and components) must be taken into account. The surface temperature should not exceed 27°C on a permanent basis. If other underfloor heating systems are used, please consult the application engineering department of Windmöller GmbH. To prevent rot damage to wood-based subfloor constructions (e.g. wooden beam ceilings), ensure or guarantee sufficient rear ventilation of the construction.

Tools for laying (1)

- Laying knife with trapezoidal blade
- Folding rule / tape measure
- Spacer
- Pencil / parallel tracer
- Angle
- Punch



1

Acclimatization (2):

wineo 1000 Rigid/Multilayer for clicking as well as all required auxiliary materials must be acclimatized at least 24 hours before installation in small stacks (max.3) in the rooms to be installed or adjacent rooms under the following conditions!

Room climatic conditions:

- Room air temperature > 18°C (but not more than 26°C).
- Floor temperature > 15°C (but not more than 22°C)
- Relative humidity < 65%
- Subfloor moisture level < 75% RH



2

PURLINE

wineo 1000 Rigid/Multilayer for clicking FoldDown

Generally, an additional vapor retarder (3) in the form of a PE film with an SD value $\geq 75\text{m}$ is required on mineral subfloors. The vapor retarder is laid underneath the intermediate layer. The overlaps are to be connected with a suitable sealing tape in a moisture-barrier manner. In the case of rooms without basements, vaulted ceilings or passageways, a suitable structural seal must be applied. This also applies to installations above rooms with particularly high humidity or for installations directly on concrete.

**3**

The installation of wineo 1000 Multilayer for clicking

Movement joint / edge distances:

Movement joint: at least 10mm wide.

Tip: Use leftover pieces of the floor covering as spacers. Also observe a distance of 10mm to all fixed objects in the room, such as pipe ducts, door frames, etc.! This movement joint must not be covered with silicone, electric cables or similar!



Laying:

Lay the panels with the face towards the main light source of the room. You can significantly improve the inherent stability of the installed floor by laying long, narrow rooms lengthwise. Always work from left to right in the laying area (4). In doing so, the tongue sides of the panels face the wall. Make sure that the tongue and groove head joints fit exactly over each other and lock them with light pressure until they snap into place.



Now mark (5) the element to be inserted at the end of the room and cut (6) it to fit exactly so that the edge distance of at least 10 mm is ensured (7).

PURLINE

wineo 1000 Rigid/Multilayer for clicking FoldDown

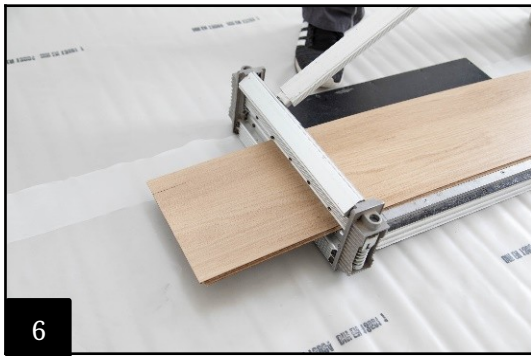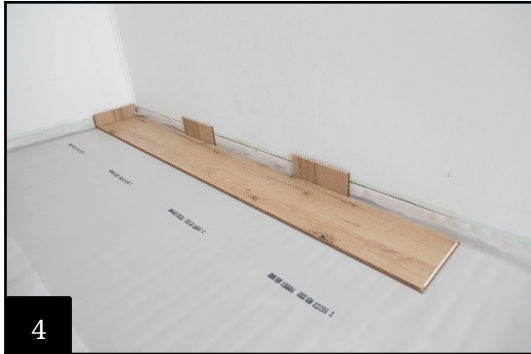


To lay the subsequent rows, place the remaining panel of the first row, at least 30cm long, in the longitudinal groove of the row already lying flat at an angle of approx. 30° and lower it against the front row with slight pressure (8). Take the following panel, guide it lengthwise at an angle of also 30° into the panel of the first row already lying flat on the floor, bringing it as close as possible to the head side (9) of the previously laid panel and lock it (10) as described above. This technique is used to lay the entire remaining row and remaining surfaces. To lay the last row, measure the distance between the wall and the laid row and transfer it to the panel. If possible, the last laying row should correspond to half a panel width. Remember about the 10mm wide movement joint.

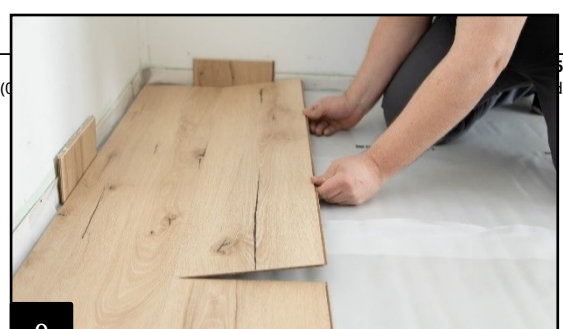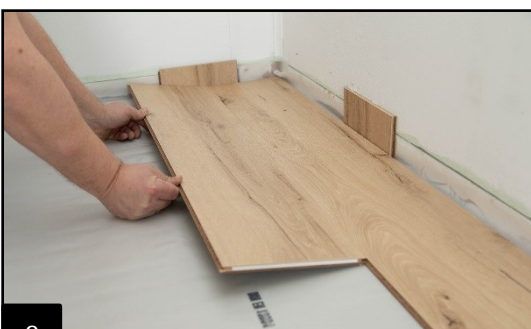

PURLINE

wineo 1000 Rigid/Multilayer for clicking FoldDown

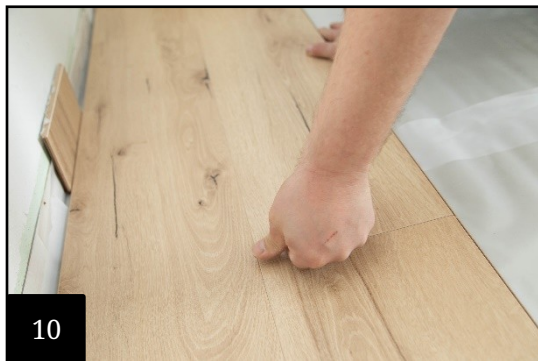

Movement profiles in the area:

Rooms with an uninterrupted area of 100m² can be laid without joints, taking into account double the edge distance (approx. 10mm). A side length of approx. 10m should not be exceeded. Suitable movement profiles should be used for very narrow, long rooms. Room areas that are interrupted by rising building components (pillars, partition walls, doorways, etc.) should be separated by placing movement joints (at least 10mm, depending on the size of the area) at the height of the building components.

When installing skirting boards, transition or end profiles, it must be taken into account that the skirting boards or profiles must never be fastened to the floor covering!

Important notes on the completion of the installation

PURLINE

wineo 1000 Rigid/Multilayer for clicking FoldDown

- Remove all spacers
- The **wineo 1000 Multilayer for clicking** must not be fixed on site at any time. Neither must the flooring be fixed to the subfloor nor to furniture or other fixed installation parts.

Special features and exceptional situations

- In conservatories or similar rooms with large-scale overhead glazing, the use of **wineo 1000 Multilayer for clicking** should be regarded as critical due to extreme fluctuations in the room climate and requires separate coordination and approval by Windmöller GmbH.
- When using permanently elastic sealants, we recommend first applying a joint sealing tape (see Accessories Part No. 20080300) to the joint areas and then filling them with silicone compound to create a two-sided bond. Permanently elastic sealed joints are to be regarded as maintenance joints and must be regularly checked for functional capability and renewed if necessary.
- In order to prevent material changes/damage, sufficient shading must be provided and an edge distance of 10mm (if necessary, use end profile PS400PEP) must be maintained when laying in areas with strong sunlight.
- Our **PURLINE floorings** meets the highest quality requirements in many respects. This also applies to the light fastness according to EN 105- B02. However, a standard test can never simulate the intensity of natural UV light, so partial color changes or fading may occur in areas with intense UV light incidence and without sufficient shading.
- A sufficiently dimensioned "radiation barrier" (e.g. glass or metal base plates) must be provided at fireplaces and tiled stoves. The size varies depending on the heating capacity of the fireplace or tiled stove. Please observe the specifications of your stove builder / chimney sweep here.
- The **wineo 1000 Multilayer for clicking** must be decoupled from all permanently installed furniture or furnishings such as kitchen units, stoves, etc.
- In the case of furnishings with high static pressure loads, sufficient load distribution (e.g. load distribution plates) must be provided in accordance with the weight.

Cleaning and care:

Please refer to our detailed cleaning and cleaning agent recommendations at www.wineo.de!

With the publication of these installation instructions (as of 09/2026), all previous versions lose their validity.